 



# CHILD SITER USER'S MANUAL

Model No.: GS601-A

**Production overview:**

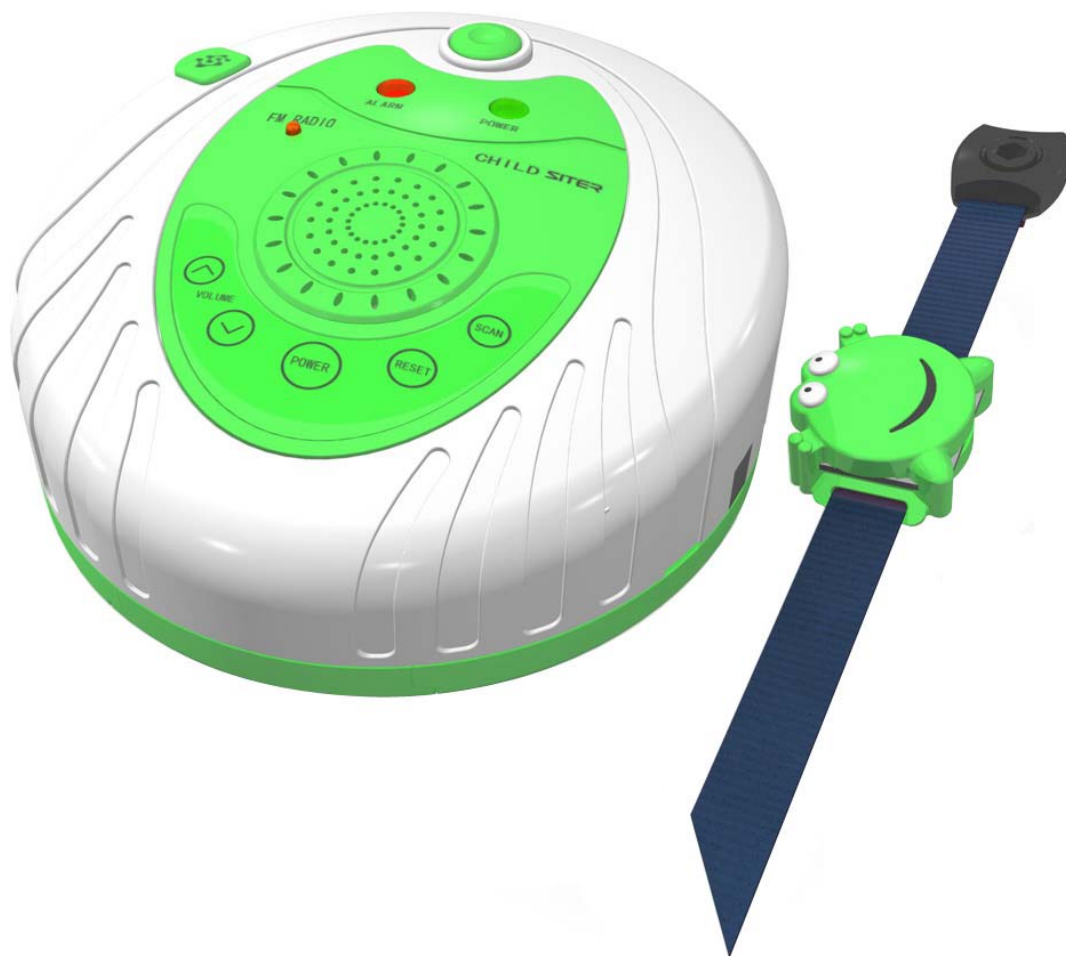
 
## **Parts Descriptions:**

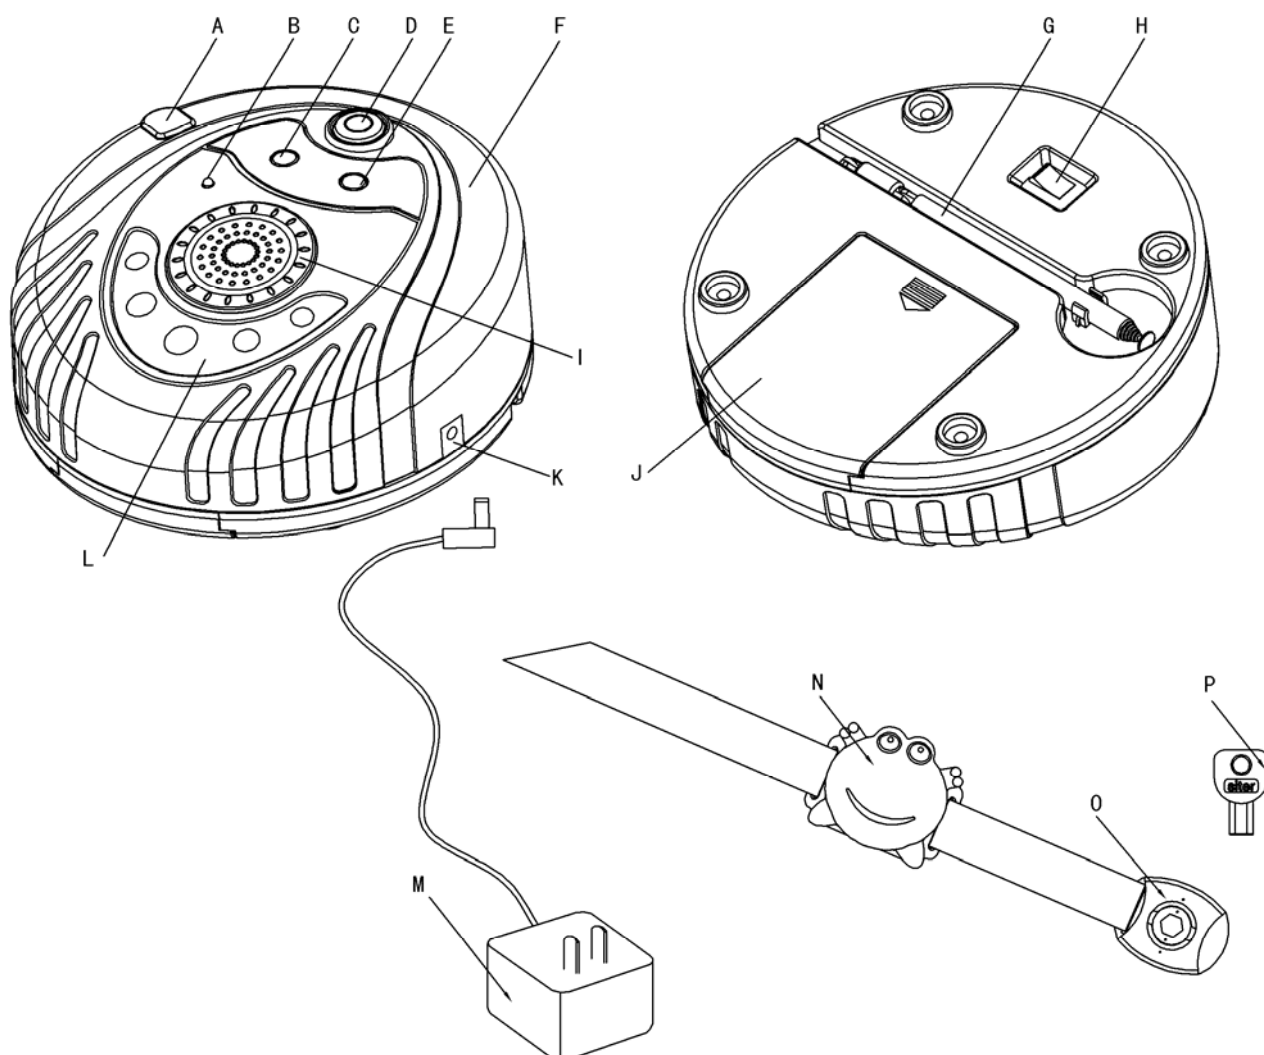

A: color coding plug

B: radio indicator

C: alarm indicator

D: test/reset button

E: power indicator

F: base station(receiver)

G: antenna

H: ON/OFF button

I: sound

J: battery cover

K: adapter socket

L: FM control panel

M: adapter

N: frog(transmitter)

O: locking buckle

P: key of locking buckle

## **Important:**

- 1: The color of your frogs and coding plug, which is inserted into the base station, and it should be the same.
- 2: The frog only can attach on the wrist.
- 3: Ensure the frogs without any covering.
- 4: Avoid any food, beverage, or other material that enters the space between the top and bottom frog shells.


## **Installation:**

### **Locate the base station**

- 1: Where children can't reach.
- 2: Where the alarm can be heard or flashing can be seen.
- 3: The base station should be placed in a dry place as it's not waterproof.
- 4: Do not locate the base station where it can be unplugged accidentally or the power supply can be switched off.

### **Installation steps**

- 1: Open the battery cover, insert the 4 x AA batteries in the direction showed in the compartment.
- 2: Close the battery cover and make sure it is firmly in place.
- 3: Open the antenna, please refer to following picture.

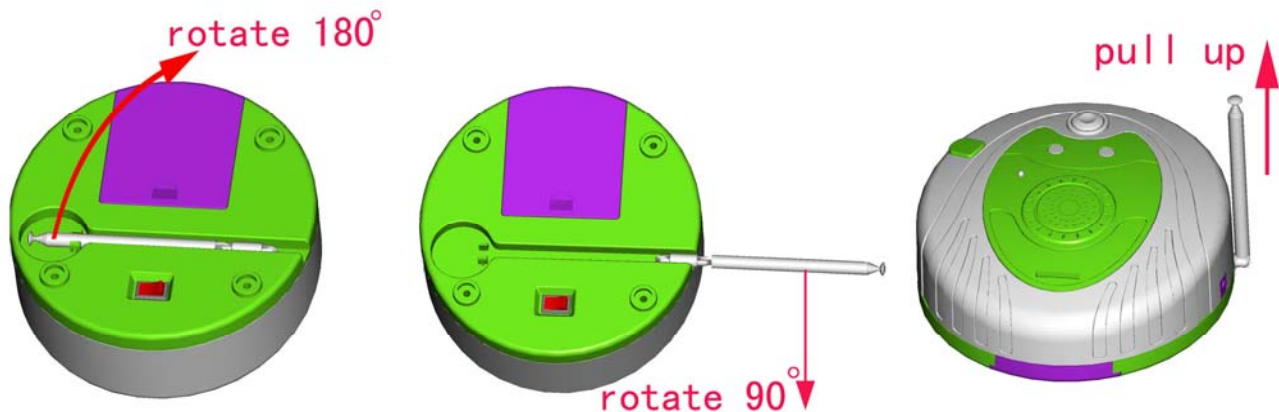


- 4: Connect the AC adapter plug with the adapter socket at the bottom of the base station.
- 5: Plug the adapter's pin into a AC live outlet.
- 6: Turn on the "ON/OFF" button and then the power indicator will be on.


**Tip: The AA batteries will be used when the AC is cut or you carry the child siter outside.**

### **Test and use the frog**

- 1: Immerge the frog into water.
- 2: The base station will sound. Press test/reset button to stop the alarm.
- 3: Shake and clean the frog with dry cloth.
- 4: If you have more frogs, please test each frog. Repeat please.
- 5: Lock and loose buckle with the key, please refer to following picture.

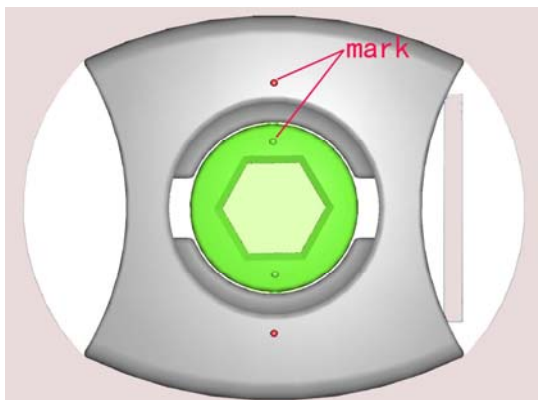


**Lock state**

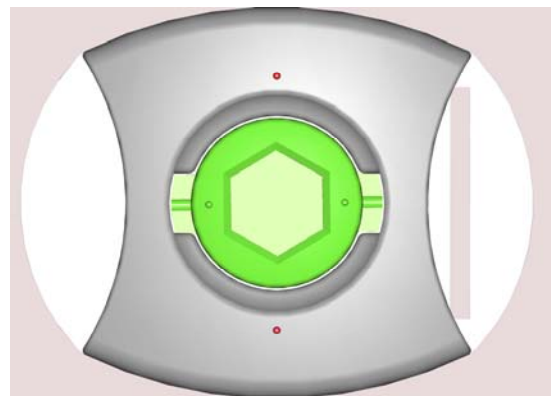

**Loose state**

### **Operate the FM radio**

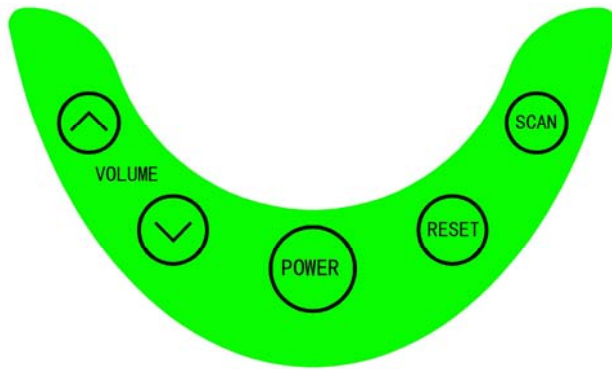

1: **Turn on the radio:** press “POWER” button less than 2 seconds, beep one time.

Meanwhile, the radio indicator will be on.

2: **Increase volume:** press “^” button.

3: **Decrease volume:** press “v” button. The volume range has 6 levels.

4: **Scan channel:** press “scan” button one time and the radio will automatically scan channels from low frequency to high frequency. Once the radio scans a channel, it will stop scanning.

If you want to listen to next channel, you can press “scan” button one time. If you want the radio to scan the channels from low frequency to high frequency again, you can press “reset” button one time, then press “scan” one time.

5: **Turn off the radio:** press “POWER” button less than 2 seconds, beep two times.

Meanwhile, the radio indicator will be off.

6: If you are using the radio, as long as the frog sends an alarm signal, the radio will be off, the base station will turn into alarm state. If you want to use the radio again, you must press the “test/reset” to stop alarm, then press “POWER” button less than 2 seconds to turn on the radio.

**Tip:** If you want to use the radio only, you can pull out the color coding plug, the base station cannot receive signal from the frog and alarm. Use the function carefully.

### **Mode description:**

1: **Alarm state:** The base station will sound very loudly with the alarm indicator flashing. If you do not press the “test/reset” button, the alarm indicator flashes always, the radio can not use either.

2: **Radio state:** The radio indicator will be on.

3: **Standby mode:** Only the power indicator is on, in any mode, the power indicator is on..

### **Low voltage:**

When you carry the child siter outside or the AC is cut, the AA batteries will provide power to the base station.

**Low voltage state:** beep a time per 30 seconds. Meanwhile, the alarm indicator flashes one time.


Please replace the AA batteries.

### **Carrying bag:**

The carrying bag is a self-attachment for option. The base station and other accessories can be protected from the weather and in transportation.

### **Color coding plug:**

If you have many color frogs and color coding plugs, you must insure your frogs and color coding plugs must be the same, otherwise the base station can not receive signal from the frogs. Replace the color coding plug, please refer to following picture.

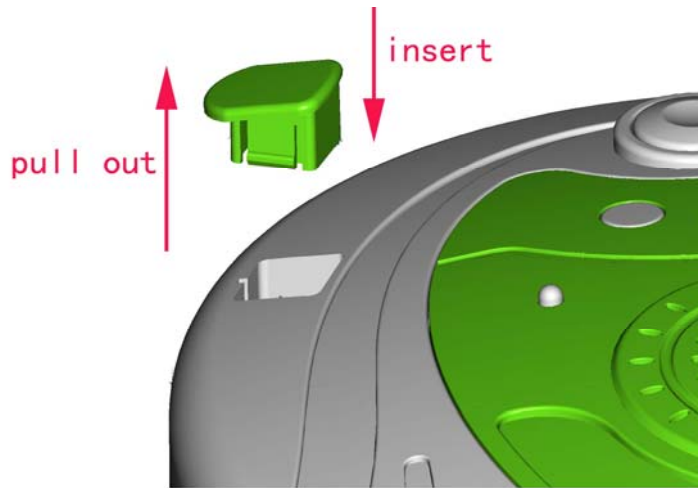

### **Warning:**

- 1: Read and follow all instructions.
- 2: The child siter is not a substitute for diligent supervision or for pool access barriers.
- 3: This unit has been designed as a “last line of defense” to help prevent a child from drowning. It is not a device which can be used to rescue your children, it is not a life saving device. So it is necessary for you to keep your children in sight.
- 4: Test all potentially dangerous water places for child. Re-verify if the base station is relocated.
- 5: After removing from water, you should shake the frog, then use towel to dry the edge of frog.
- 6: Never turn off the base station when it is in use.
- 7: The frog wristband has been designed to charm young children and it is not a toy. Please keep out of children’s reach when it being not used.
- 8: If the frog is immersed into water and the depth is more than 80 centimeters, the child siter can’t alarm perhaps.

### **Tips:**

- 1: Child siter is suitable in any water area, such as seaside, river, pond, pool, on boats and etc..
- 2: One base station can be used with many frogs.
- 3: Power-on, and the base station enters test mode.
- 4: Remove the wristband while bathing your child or playing with your child in the pool. Don’t forget to put the wristband after bathing or playing.

### **General maintenance:**

- 1: Do not allow dirt, food, beverages, or other metallic material to accumulate in the space between the top and bottom frog shells, because this action could delay or prevent alarming when the frog is immersed. This action may decrease the wireless transmission distance.
- 2: Do not use sharp or hard objects, as knife to scratch the surface of production.
- 3: Do not put frog in the dishwasher, washing machine, dryer, or any other household appliances, or hot air dry.
- 4: Keep away from freezing and high temperature.
- 5: Do not attempt to open the frog shell.
- 6: If making the frog wet, please immediately use towel to dry and shake the frog.
- 7: Test child siter every day.

### **Technical Specification of Base Station:**

The base station receives the wireless signal, and this signal comes from the frog.

**Power supply:** DC 12V (AC-DC power adapter matched) or 4x AA batteries

**Alarm sound:**  $\geq 85\text{db}$  @ 1 meters

**Standby current:**  $\leq 20\text{mA}$

**Alarm current:**  $\leq 150\text{mA}$

**Radio current:**  $\leq 120\text{mA}$  (maximum volume)

**Operation ambient condition:**  $4\sim 50^{\circ}\text{C}$ ,  $25\sim 85\%\text{R.H}$

### **Technical Specification of Frog:**

When the frog immersed in water, the frog sends wireless signal to the base station.

**Power supply:** 3V

**Operation temperature:**  $-15\sim 50^{\circ}\text{C}$

**Waterproof degrees:** IPx7

**Transmission distance:** About 60 meters in open surroundings and without electromagnetism molestation strongly.

### **Warranty and service:**

Base station---1 year warranty

Wristband---6 months warranty

**Note:** If you need replacement, take it to your dealer for disposal. Do not incinerate.

If you want to buy more frogs, please contact the dealer.